


Installing the Decorative Frame on a Foco Built-In Fireplace

Insert the decorative frame into the Foco fireplace opening, then fasten it by tightening the two included pinol screws. This will press the frame tightly into place, securing it within the built-in fireplace.

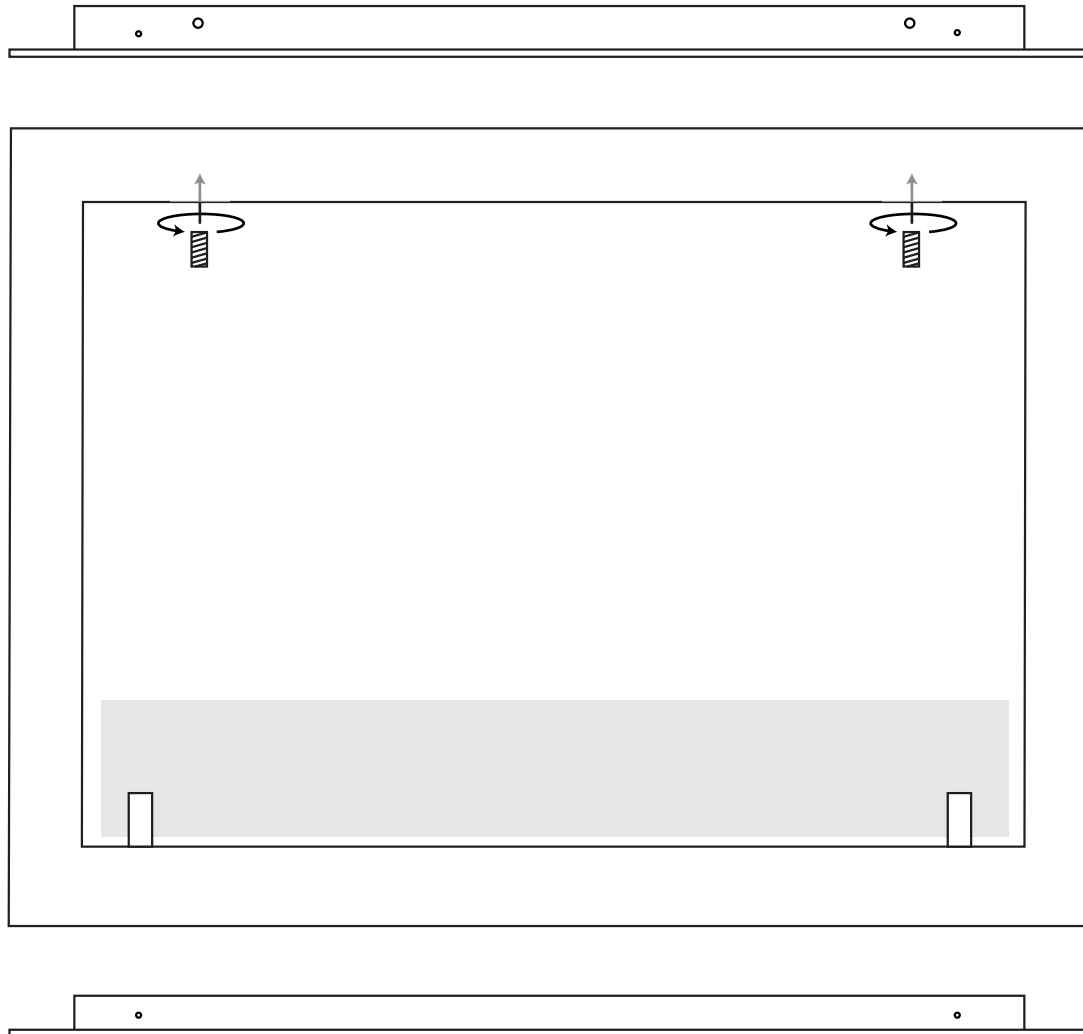

Top Section of the Frame

The top part of the decorative frame has four holes.

- **Two of these holes** are used to securely attach the frame to the fireplace using the included pinol screws.
- **The other two holes** are only needed when installing a top-to-bottom glass panel on a Foco Two fireplace model. If you're not using this type of glass, these holes can be disregarded. - *see next page*

Bottom section of the Frame

The bottom part of the decorative frame features two holes. These are designed to hold the glass brackets in place, which will support the glass panel (if used).

Installing the Decorative Frame with Top-to-Bottom Glass

Before inserting the decorative frame into the Foco fireplace, fasten glass brackets top and bottom and slide the full glass into place. When the top-to-bottom glass is attached you can insert the frame into the Foco fireplace and fit it using the pinol screws.

